







 $\epsilon$ 

**Size:** DN 15 to DN100

Ends: Between flanges ISO PN10/16/25/40, ASA150/300

Min Temperature: -20°C

Max Temperature: +200°C

Max Pressure: 40 Bars

Specifications: Spring type

All positions Metal / metal

Materials: Stainless steel

### **SPECIFICATIONS:**


- Spring type
- All positions (respect the flow direction indicated by the arrow )
- Metal / metal
- Stainless steel

### USE:

- For all common fluides
- Min Temperature Ts: 20°C
- Max Temperature Ts :+ 200°C
- Max Pressure PN: 40 bars ( see graph under )

### PRESSURE / TEMPERATURE GRAPH ( STEAM EXCLUDED ):


## **PRESSURE**

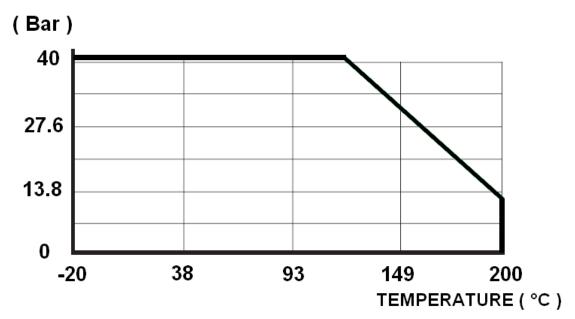

## RANGE:

- Between ISO PN10/16/25/40 and ASA150/300 flanges Ref. 386 from DN15 to DN100
  - (\*): For an installation between flanges ISO PN10/16 for DN100, we only use 4 bolts


### **HEAD LOSS GRAPH:**

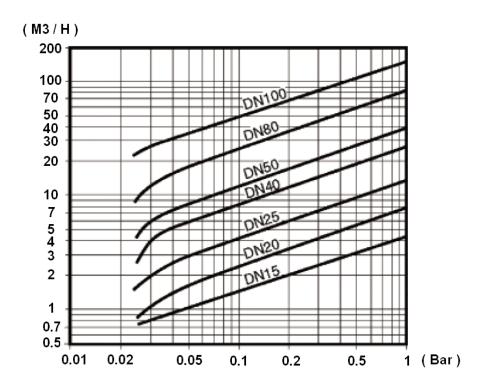

## OPENING PRESSURE ( in mbar ):


DN	Vertical Position Ascending fluid	Vertical Position Descending fluid	Horizontal Position	
DN 15	25	21	23 -	
DN 20	25	21	23 -	
DN 25	25	21	23 -	
DN 32	27	21	24	
DN 40	29	21	25 -	
DN 50	29	21	25	
DN 65	31	21	25	
DN 80	32	21	26	
DN100	33	21	27 -	

# MATERIALS:

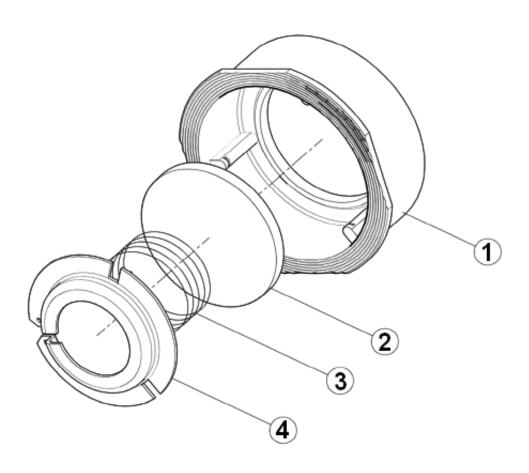

Item	Designation	Materials		
1	Body	ASTM A351 CF8M		
2	Disc	ASTM A240-316		
3	Spring	SS 316		
4	Spring holder	ASTM A240-316		

## SIZE (in mm):

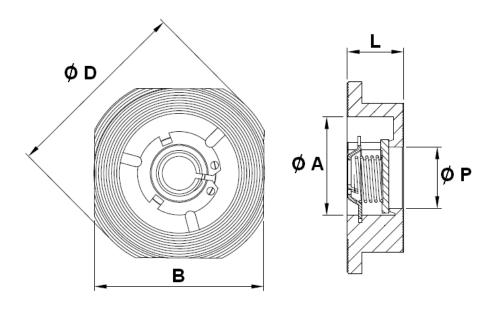

Ref.	DN	15	20	25	32	40	50	65	80	100
	Ø A	34	39	46	60	70	79	101	116	134
	В	44.6	54	65	78	88	101.6	120.4	134	164
386	Ø D	54	62	73	83	93	107	126.5	143	171.4
	L	16	19	22	28	31.5	40	46	50	60
	Ø P	12.5	20	25	32	38	49	64	78	98
	Weight ( Kg )	0.1	0.2	0.2	0.4	0.6	0.8	1.4	2	3

#### **STANDARDS:**

Fabrication according to ISO 9001: 2008

 DIRECTIVE 97/23/CE : CE N° 0035 Risk Category II

- Designing according to EN 12516-1
- Tests according to EN 12266
- Length according to DIN 3202 K4
- ATEX Group II Category 2 G/2D Zone 1 & 21 Zone 2 &22 (optional marking)

**ADVICE**: Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.

## **INSTALLATION INSTRUCTIONS**

## **GENERAL GUIDELINES:**

- Ensure that the check valves to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate
  equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.

## **INSTALLATION INSTRUCTIONS:**

- Before installing the check valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the check valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the check valve unit
  will not absorb any gaps. Any distortions in the pipes may affect the thightness of the
  connection, the working of the check valve and can even cause a rupture. To be sure, place the kit in
  position to ensure the assembling will work.
- Make sure there is enough space so that the disc can be opened totally in the pipe.
- If there is a direction changing or if there's another material, it's better to take away the check valve so that it is outside the turbulence area ( **between 3 and 5 times the ND before and after** ).
- After a pump please refer to norm NF CR 13932 to install the check valve.